



### Ceiling-Mounted LCD Projector

Aim the black Hitachi remote control (R016H) at the projector and press the red power button to turn it on. The projector will need approximately 30 seconds to warm up.

**I pressed the power button on the Hitachi remote control, but the projector did not turn on. What do I do?**

*Check the POWER status LED on the projector to see if the projector is ready to be turned on.*

**Amber (Blinking):** Projector was just turned off and is cooling down; wait for the light to turn solid amber before trying to turn the projector back on.

**Amber (Solid):** Projector is ready to be turned on.

**Green (Blinking):** Projector received the command to turn on and is in the process of doing so.

**Green (Solid):** Projector is on.

**Red (Solid or Blinking):** Contact the Help Desk.



Hitachi Remote Power Button



Projector Status LEDs



Monitor's Power Button



Computer's Power Button



Hitachi Remote COMPUTER Button

### Podium Monitor

This room is equipped with a HP E220t touch screen monitor. It is powered on/off by pressing the power button located in the lower right corner. You can use either a stylus or your finger to interact with the screen.

### Podium Computer

The computer is located at the top of the equipment rack inside the podium. If needed, press the power button (located on the left-side of the computer) to turn it on. USB ports are to the right of the power button.

Once the computer is on, the image should appear on both the ceiling-mounted LCD projector and podium monitor.

If there's no image on the projector, press the **COMPUTER** button on the Hitachi remote control until the projector is set to **COMPUTER IN 1**.



## Volume Control

On the Hitachi remote control press the **VOLUME +** to increase volume and the **VOLUME -** button to decrease it. Mute is toggled on/off with the **MUTE** button.

If needed, volume controls on the computer itself can also be adjusted.



Hitachi Remote Control  
Volume Buttons

## Before Leaving the Room...

### Room PC

If you used the room's computer make sure that you power it down.

To turn the computer off, open the Start Menu (click the  button in the lower-left corner) and then click on the  button.

### Ceiling-Mounted LCD Projector

Aim the Hitachi remote control at the projector and press the red power  button twice to turn it off. The projector will need approximately 75 seconds to cool down before it can be turned back on.



Hitachi Remote  
Power Button